



# CHASSIS STABILITY MONITORING SYSTEM

OPTIONAL ADD-ON FOR LIFTMOORE WP CRANES

- Reports the X and Y axis of the chassis on the transmitter and in the WiFi Diagnostics Menu
- Crane will enter **CHASSIS TILTED** mode if either the X or Y reaches or exceeds 6 degrees
- **CHASSIS TILTED** mode limits all crane functions to 50% speed, and disables winch up, boom elevation down, and boom extension out.
- Crane speed will return to normal operation once the X and Y axis are both less than 6 degrees

